


# TN34汽油机分解图

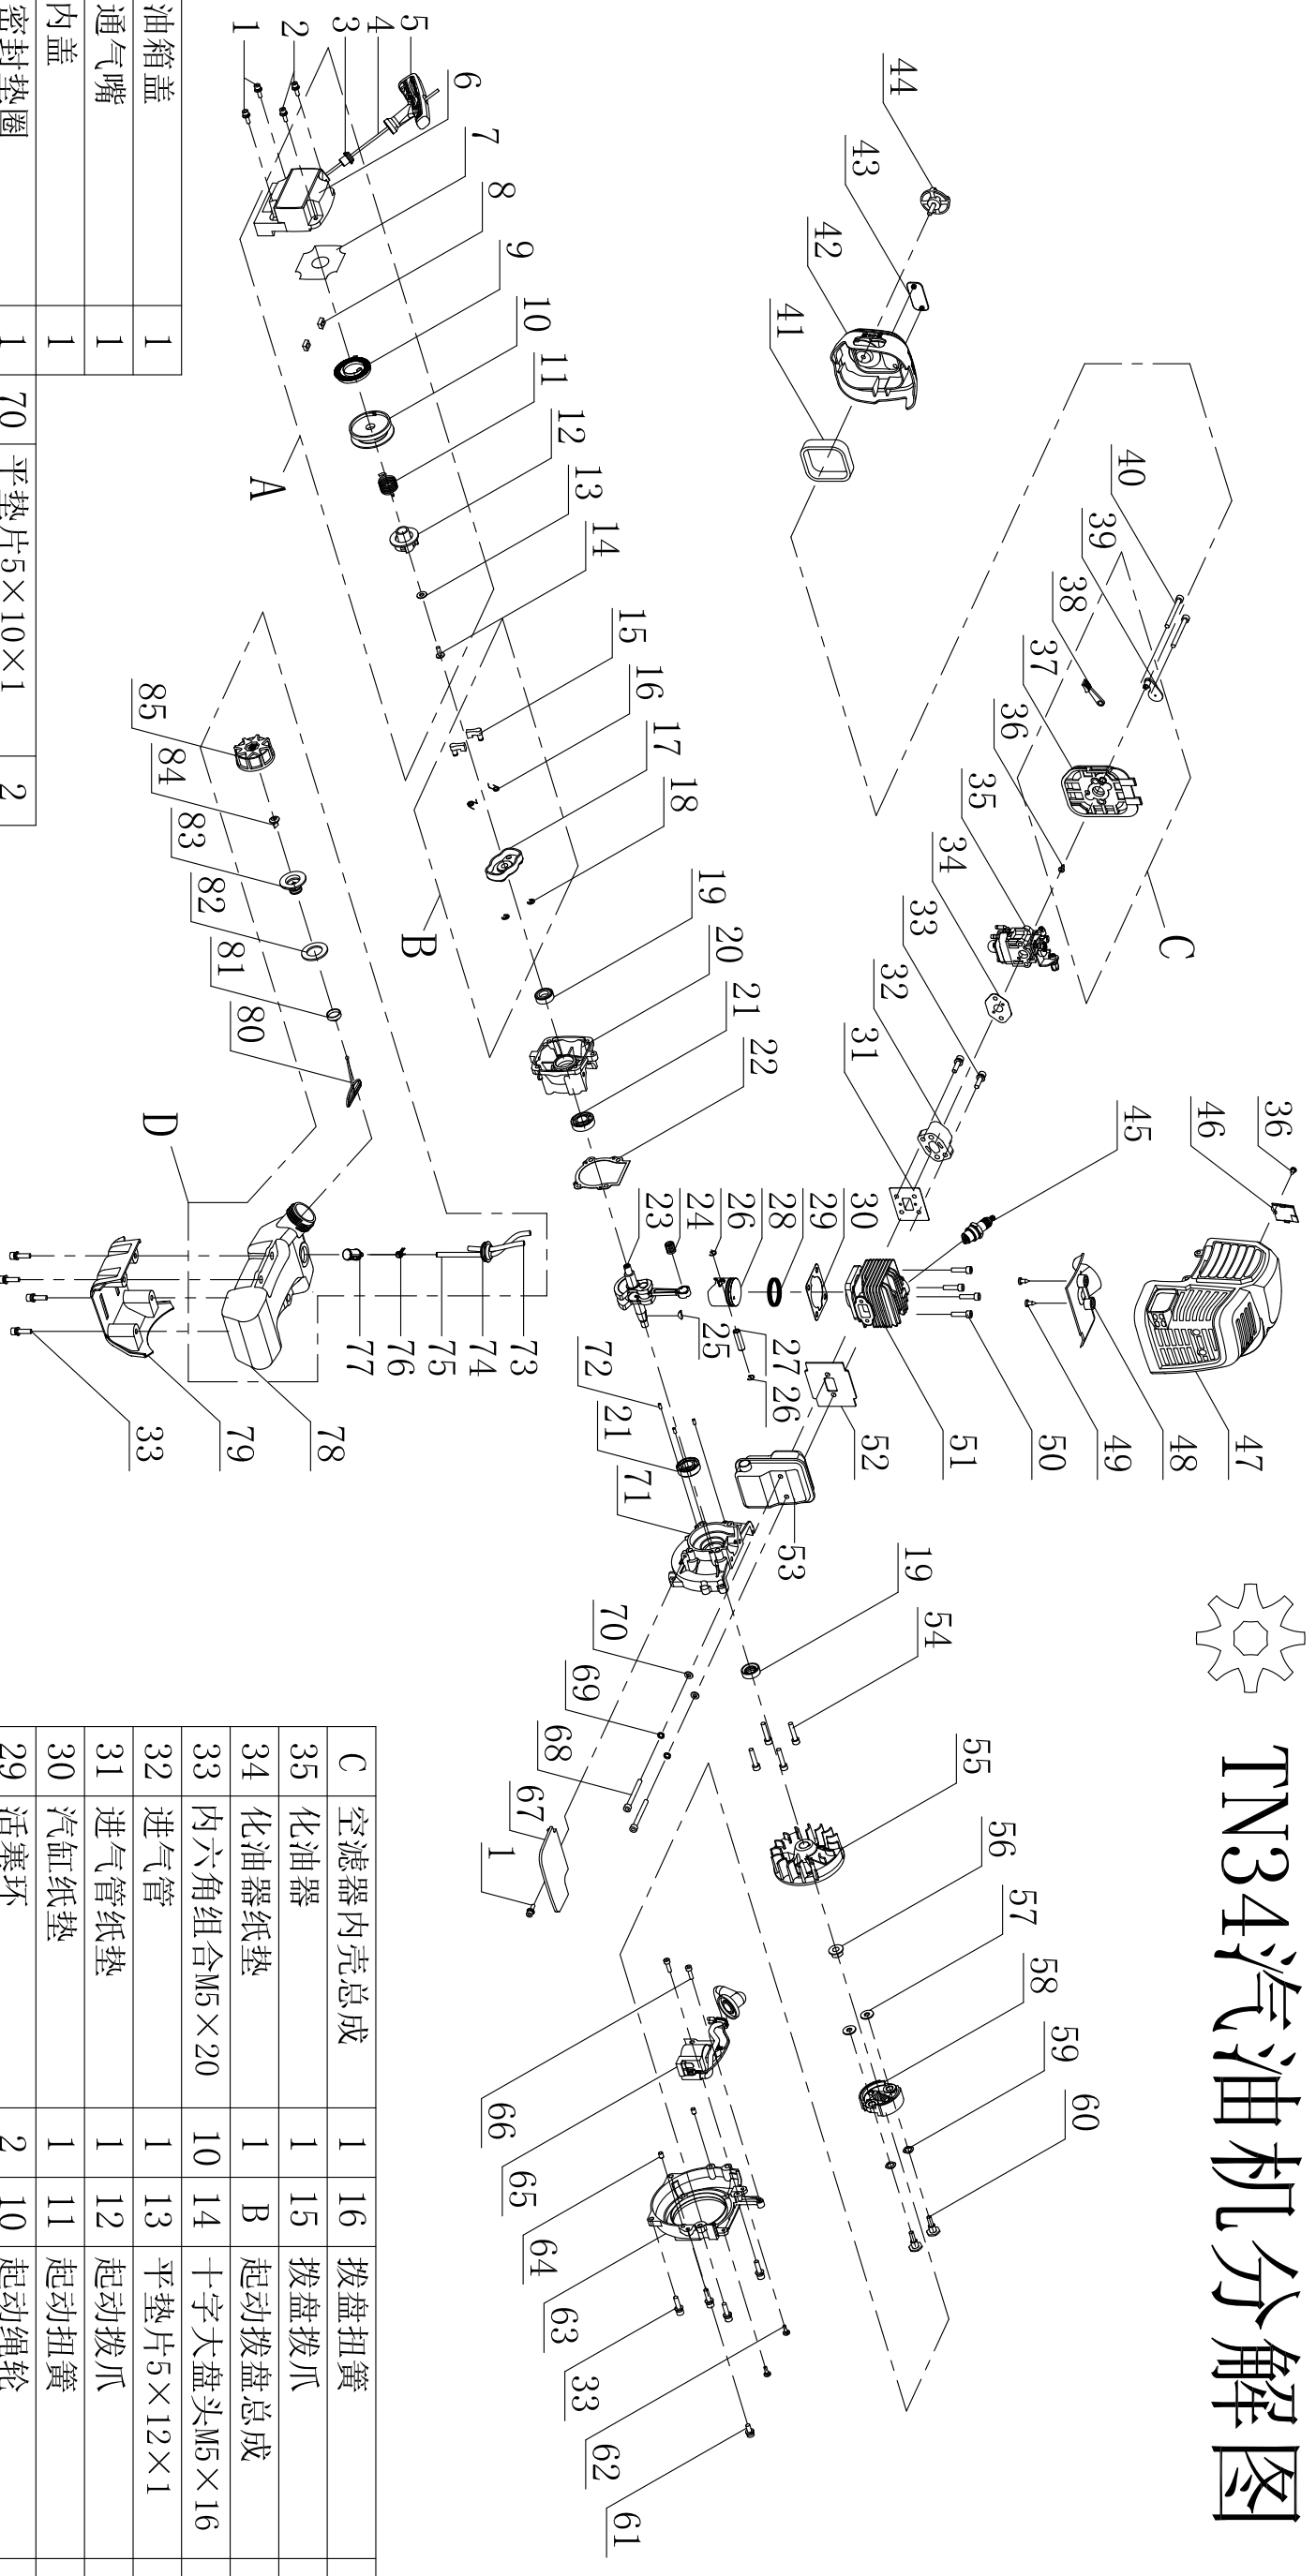

序号	名称	数量	序号	名称	数量
84	油箱盖	1	35	化油器	1
83	通气嘴	1	34	化油器纸垫	1
83	内盖	1	33	内六角组合M5×20	10
82	密封垫圈	1	32	进气管	1
81	端盖	1	31	进气管纸垫	1
80	防脱链	1	30	汽缸纸垫	1
79	油箱保护架	1	29	活塞环	2
78	燃油箱	1	28	活塞	1
77	燃油滤芯	1	27	活塞销	1
76	燃油滤芯卡扣	1	26	活塞销挡圈φ8	2
75	燃油管	1	25	半圆键3×5×13	1
74	燃油管座	1	24	滚针轴承K81111	1
73	回油管	1	23	曲轴连杆杆部件	1
D	燃油箱总成	1	22	箱体纸垫	1
72	定位销3×8	2	21	开式轴承6001	2
71	大箱体	1	20	小箱体	1
			19	油封12×22×7	2
			18	开口挡圈φ5	2
			17	起动拨盘	1
			16	拨盘扭簧	2
			15	拨盘拨爪	2
			14	起动拨盘总成	1
			13	平垫片5×12×1	1
			12	起动拨爪	1
			11	起动扭簧	1
			10	起动绳轮	1
			9	起动卷簧	1
			8	方形螺母M5	2
			7	起动器罩	1
			6	绳轮垫	1
			5	起动手柄	1
			4	起动绳	1
			3	起动绳套	1
			2	起动器总成	1
			1	内六角组合M5×20	2
				内六角组合M5×16	3
				盖板	1
				火花塞 L7T	1
				空滤器旋钮	1
				空滤器海棉	1
				空滤器外罩	1
				空滤器纸垫	1
				消音器	1
				消音器纸垫	1
				磁飞轮	1
				六角法兰面螺母M8×1	1
				离合垫片	2
				离合器罩	1
				汽缸	1
				十字盘头自攻ST2.9×8	2
				十字盘头自攻ST4.2×12	2
				导流板	1
				汽缸罩	1
				波形成片	2
				波形垫片	2
				台阶螺栓	2
				十字盘头组合M5×12	2
				边盖	1
				定位销5×8	2
				高压包	1
				内六角M5×30	4
				内六角M5×16	1
				内六角M4×10	1
				十字大盘头M4×10	1
				十字大盘头组合M5×12	4
				内六角M5×20	1
				内六角M5×12	1
				内六角M5×10	2
				内六角M5×8	2
				内六角M4×16	2
				消音器隔热板	1
				内六角M5×55	2
				平垫片5×10×1	2
				弹簧垫圈 5	2
				弹垫圈 5	2
				防脱链	1
				密封垫圈	1
				端盖	1
				油箱盖	1
				油箱保护架	1
				燃油箱	1
				燃油滤芯	1
				燃油滤芯卡扣	1
				燃油管	1
				燃油管座	1
				回油管	1
				燃油箱总成	1
				定位销3×8	2
				大箱体	1